



FOR CONTAINER SIZES PLUG UP TO TREEPOT 4

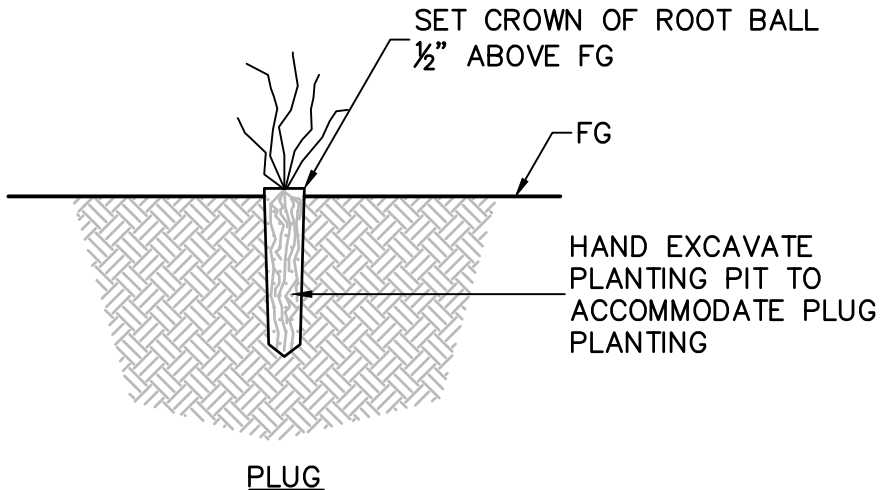

NOTES

1. PROVIDE WEED FREE ZONE AROUND PLANTING SITE.
2. SEE PLANS FOR SPACING AND LAYOUT ELEVATIONS.

FOR CONTAINER SIZES 1, 3, 5, AND 15 GALLON

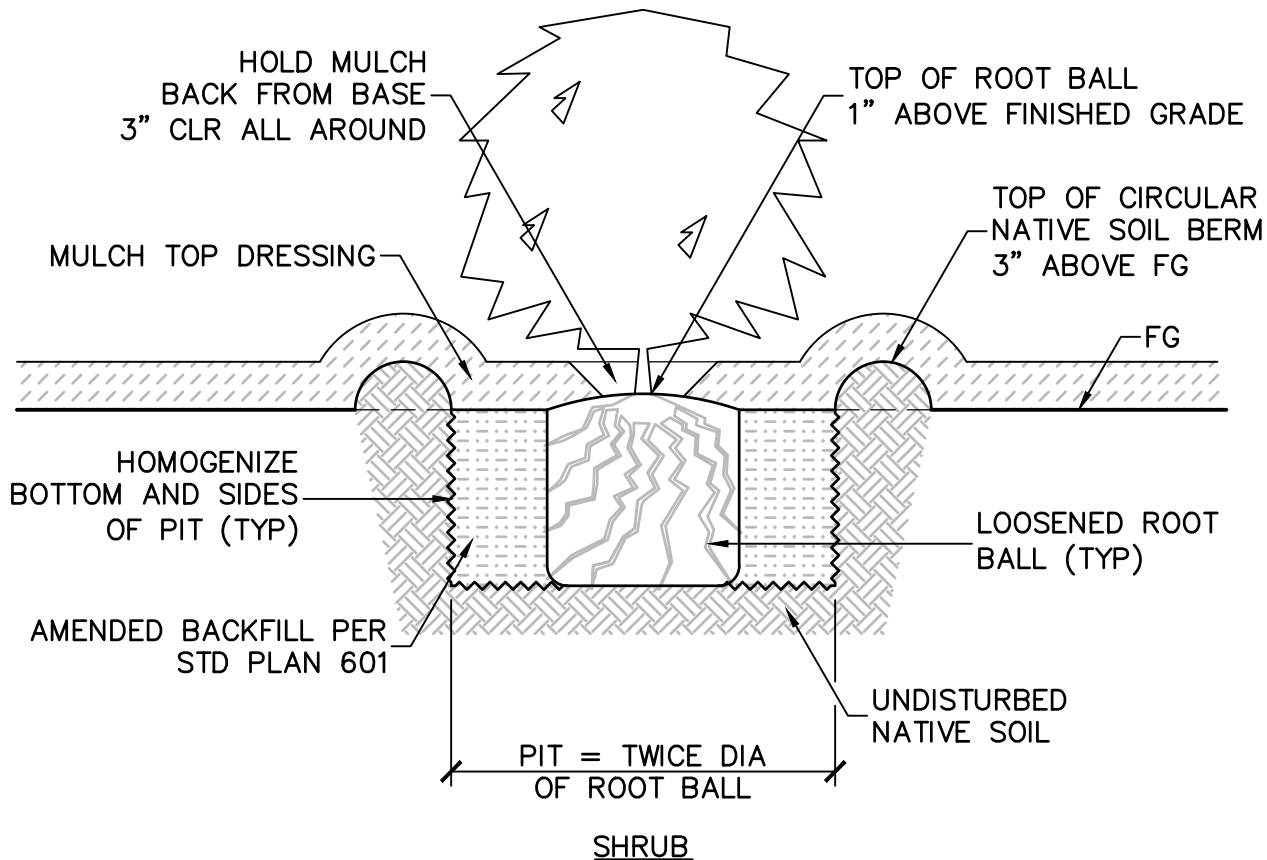

(A) FLAT AREA PLANTING

NOTES

1. SEE NOTES ON STD PLAN 601.
2. SEE SHEET 2 FOR SLOPED AREA PLANTING.



SHRUB PLANTING

REVIEWED BY THE PARK STANDARDS COMMITTEE, AND
APPROVED BY THE CHIEF OF DESIGN & CONSTRUCTION

[Signature]


03/04/2025

EAST BAY REGIONAL PARK DISTRICT - STANDARD PLANS

STD PLAN

603


SHEET 1 OF 2
NOT TO SCALE

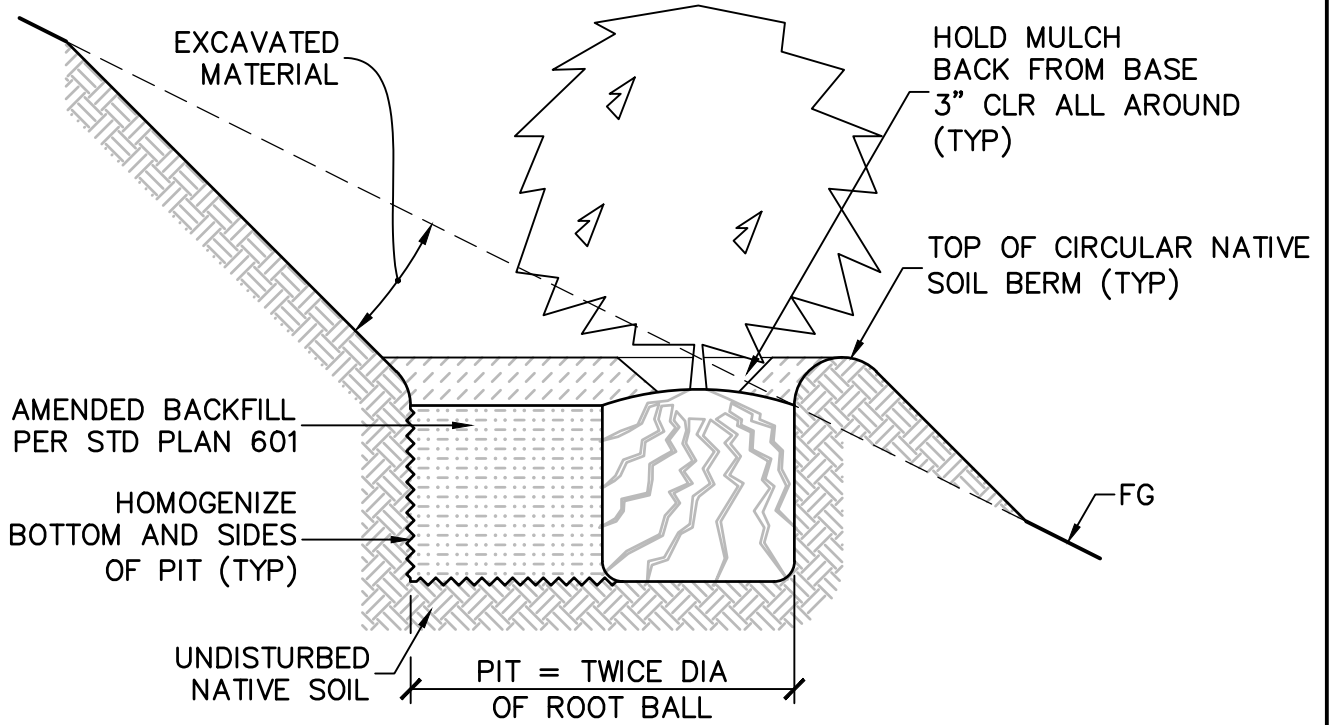

NOTES

SLOPES 3:1 AND STEEPER

1. SEE NOTES ON STD PLN 601.
2. CUT OVERFLOW SPILLWAY INTO UNDISTURBED SLOPE AT SIDE OF POCKET INTO FIRM SOIL FOR WATER OVERFLOW OUT.

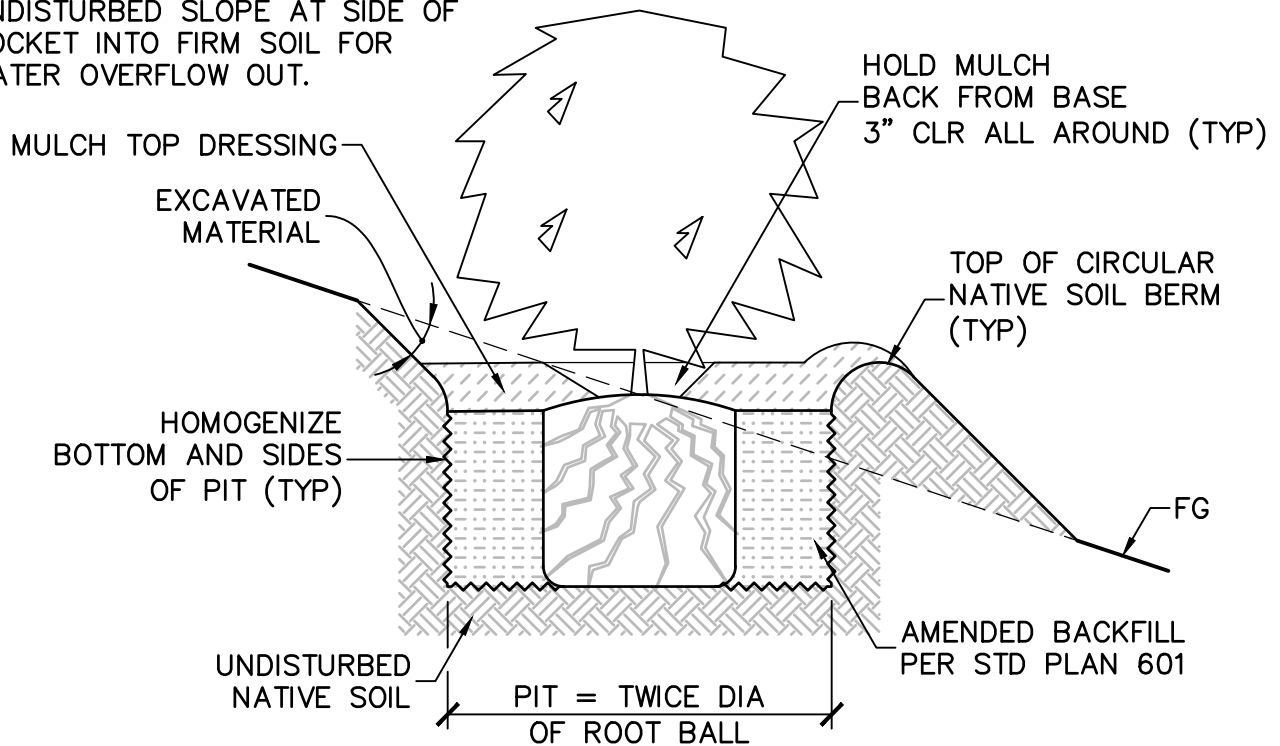

SLOPES LESS STEEP THAN 3:1

(B) SLOPED AREA PLANTING



SHRUB PLANTING

REVIEWED BY THE PARK STANDARDS COMMITTEE, AND APPROVED BY THE CHIEF OF DESIGN & CONSTRUCTION

[Signature]

03/04/2025

STD PLAN

603

SHEET 2 OF 2
NOT TO SCALE